



Damaged door frame






REMOVING DAMAGED DRYWALL

ADDING PLYWOOD FOR FUTURE STRENGTH



WALL TORN APART FROM FORKLIFT DAMAGE

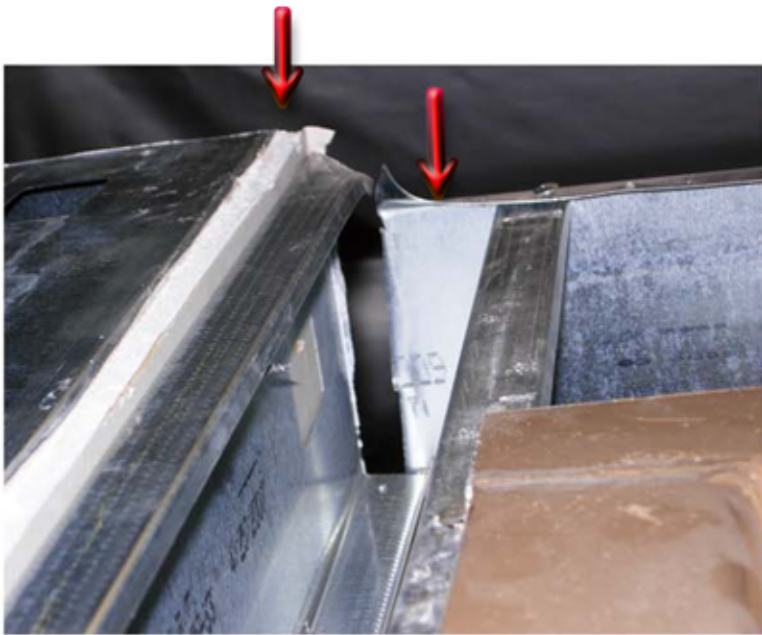

ADDING HEADER BOARD TO SUPPORT WALL



REPAIRED WALL STUDS BEFORE AND AFTER



PLYWOOD ADDED TO SIDE WALL FOR PALLET PROTECTION



Door frame repaired



NEW BOLLARDS

